

# **USER MANUAL**

# **SPARKULAR FALL**

V1.0

2021/03/30



# USER MANUAL

## SPARKULAR FALL

★Please read this manual carefully before operating this product.

★Warranty card attached in the manual, please keep it well.

### ▲SAFETY CONSIDERATIONS

- \ Never touch the nozzle of SPARKULAR FALL, danger of getting burnt
- \ Never touch the sparks which shooting out from the nozzle
- \ Unauthorized repair are prohibited, it may cause serious incident
- \ Keep SPARKULAR FALL dry and do NOT use in rain or snow
- \ Make sure lid of feeding hopper are well covered when use Sparkular Fall. Accidentally Burning of Composite Ti can only use sands to extinguish. Composite Ti should keep away from moisture and stored in a dry sealed environment
- \ Keep audience and flammable material at a minimum distance of 3m from SPARKULAR FALL and it's drop sparks. Make sure sparks shoot out from Sparkular FALL can NOT touch any objects
- \ Ensure that children, animals and unauthorized persons don't have access to the SPARKULAR FALL
- \ Clear material for Sparkular Fall is necessary both before the show and after the show, to clear the Composite Ti remains in the pipe. Check whether there are Composite Ti aggregate in the nozzle after each show, if any, please clean it up, or it will affect the shooting effect or even damage Sparkular Fall
- \ The Sparkular FALL power supply cable (sparkular fall power supply EX-cable) maximum allowed cascade for Sparkular Fall is 6pcs (BT04)/ 3pcs (BT05), exceeded connecting may result in damage or even cause fire
- \ For better heat dissipation, block the air intake and air outlet is prohibited
- \ Cover of nozzle of Sparkular Fall is prohibited

### ▲Description

SPARKULAR FALL is hanging special effects equipment for indoor/outdoor use to generate dazzling silver "waterfall" sparks effects. According to different usage scenarios, operator can self define various types of "water curtain" effects vary from 2m to 7m by use of different types of HC8200.

## ▲ Technical Specifications

- \ MODEL: BT04/BT05
- \ DIMENSION: 196×208×192mm
- \ WEIGHT: 6.0kg
- \ VOLTAGE: 220V(BT04)/110V(BT05), 50/60Hz
- \ WORK POWER: 500W
- \ EFFECT HEIGHT: 2-7m(according to HC8200 type)
- \ INTERFACE:3-pin XLR, POWER IN/OUT
- \ CONTROL: DMX 2 channels, Wireless Remote
- \ ADAPTABLE TRUSS SIZE: 40-60mm

## ▲ Operation Panel

### 1. LED display area:




**READY:** After turning on machine, it will automatically preheat around 5 minutes, when the "READY" green light turns from flashing into long on, indicates that the machine is ready to work

**DMX:** Flashing shows that DMX signal is connected, otherwise is without signal

**FAULT:** When any malfunction , the light turns on

**HEAT:** When the machine is heating, signal light turns on

### 2. Control button area:

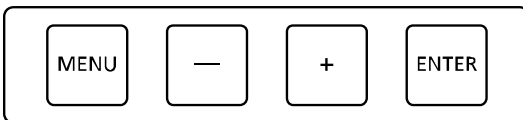

**MENU:** short press to switch interface, press for 3 seconds can switch to the advanced setup interface

-: Parameters down

+: Parameters up

**ENTER:** Confirm and save parameters.

### 3. Bottom Indication Light:




**Off:** Sparking or Not in preheating

**Quick Flashing:** Preheating

**Long on:** Preheated

**Slow Flashing:** Error warning

### 3. RFID area:

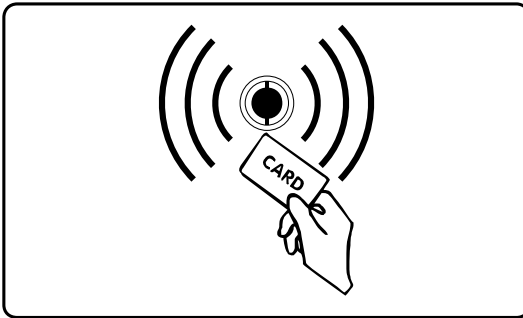

Composite Ti with RFID card, swiping cards used to identify parameters and types of granules. Please note that granules RFID card can increase the single machine specific working time. The card is disposable, one card can only use one time

## ▲ Interface

### 1. Main Interface:

<b>DMX Address</b>	<b>1</b>
<b>210 ■ ■ ■</b>	<b>07.24</b>

**First line:** Display DMX address is "1"

**Second line:** Display the present inner core temperature and the temperature progress bar; displays remaining time is 7 minutes and 24 seconds

## 2. Error information:

Error information	Explanation
E0 System IC	Systematic error
E2 Temp. Sensor	Temperature sensor was damaged
E3 P Temp. Over	Chassis temperature is too high to shut down
E4 Time Remain	Insufficient granules or remaining time, please swiping time card
E5 K Temp. Over	Inner core temperature is too high to shut down
E6 Heat Fail	Heating failed

## 3. Setting Menu:

Press "MENU" to enter the Setting interface, press the "MENU" button to enter different options until you return to the main interface

Options	Range	Explanation
Set DMX Address	1-512	Set the DMX address, machine become a wireless host and can send out DMX signal when its address is "1++"
Wireless Control	ON/OFF	Wireless function switch, you can match code when shows "ON"
Manual Fountain	ON/OFF	Manual fountain switch , for testing purposes only

## 4. Advanced Menu:

Press "MENU" 3 seconds to enter the advanced setup interface, press MENU key to enter different options, wait 3 seconds to return to the main interface

Options	Range	Explanation
Set Temperature	500-610	Setup inner Core temperature
Auto Heat	ON/OFF	Auto preheat function switch after turn on machine
Density	70-100	Adjust the sparks density
Mode Selection	Factory Mode User Mode	Factory Mode is factory debugging mode, User Mode is using mode
Default Parameter		Press "ENTER" to restore all parameters to the factory settings

## ▲ Use

### 1. Power cable connection:

For convenient use, there are power supply cable and power supply ex-cable. Power Supply ex-cable can achieve multiple devices connected, maximum cascade is 6pcs(BT04)/3pcs(BT05). All power plugs are industrial plug with lock, it need to toggle snap and rotate when using

### 2. Host controller mode:

Using the host controller to monitor the working status of Sparkular Fall, to achieve multiple dynamic effects and stable controlling. Sparkular Fall has high/low level, the height settings 1-5 in host controller is low level, 6-10 is high level. Please see the details in host controller manual.

### 3. Cable DMX mode:

When using the DMX controller, the system takes 2 channels

The First channel	Functions
0-15	Firing OFF
16-135	Low Level Fountain ON
136-255	High Level Fountain ON
The second channel	Functions
60-80	Clear Material
20-40	Emergency Stop
0-10	Pre-heat OFF(Disable in Auto-heat)
240-255	Pre-heat ON(Disable in Auto-heat)

### 4. Wireless remote control mode:

**Wireless Control  
ON**

If the remote control cannot work, please check whether wireless function was turn on. Press MENU to switch to wireless control setting, menu is set to "ON", press "ENTER". In this interface, you can also match code with remote controller

Sparkular Fall can controlled by both DMX and remote controller, when there are DMX signal input, wireless remote controller will not work.

When using remote controller you need to pull out the antenna.

After pressing "set" button, press "3 on" button immediately to change to low level, press "3 off" to change to high level.

<b>1 ON</b>	Address "1" ON	<b>1 OFF</b>	Address "1" OFF	
<b>2 ON</b>	Address "3" ON	<b>2 OFF</b>	Address "3" OFF	
<b>3 ON</b>	Address "5" ON (Low Level)	<b>3 OFF</b>	Address "5" OFF (High Level)	
<b>Set</b>	◆When use different remote controller ◆Change Levels	<b>CLEAR</b>	◆Automatically clean material for 3 seconds ◆Start Pre-heat	
<b>5S</b>	All Starts 5 seconds	<b>15S</b>	All Starts 15 seconds	
<b>30S</b>	All Starts 30 seconds	<b>OFF</b>	All stop	

**Attention:** The first group machines correspond to DMX address "1", the second group DMX address is "3", the third DMX address is "5", remote controller controls 3 groups of machines. You can also set all Sparkular Fall address as "1"

When the lamp is not lit or becomes weak on the remote controller, please replace the battery. It is better to take battery out when transporting to prevent consumption of battery power by unmeant press of button Battery model: 12V 23A

When the machine is occasionally not working, may be caused by interference, please press the start button again


Wireless control is easily influenced by interference, it suggests to stay as close to machine as possible when use remote controller, and machines cannot use metal shielding

### 5. Wireless host Sparkular Fall mode (requires communication cables):

In occasion of strong interference, using the wireless host can avoid interference, ensure stable control. Enter into Set DMX Address option menu, press "-" when the DMX address is "1" to set the first unit of Sparkular Fall's DMX address into "1+", this machine address is "1", but it can also output DMX signal and turns into wireless host Sparkular Fall. Use communication cables to connect all the Sparkular Fall, the host Sparkular Fall will receive the signal from remote controller and transfer to all other Sparkular Fall via communication cables to realize stable signal transmission

**Attention:** In this mode, please don't connect to other controll mode to prevent from communication disorder

### 6. Hanger and Lifting Ring nstallation Method:

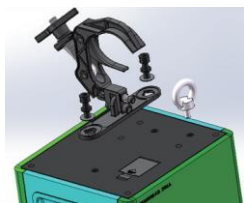

## 7. Consumptive Material Type Options Instruction:

<b>HC8200</b>	<b>Fall length(Low Level)</b>	<b>Fall length(High Level)</b>
MEDIUM	2m	3m
LARGE	3m	4m
LARGE- I	4m	5m
LARGE- II	5m	7m



# Warranty Instructions

▲ Sincere thanks for your choosing our products, you will receive quality service from us

▲ The product warranty period is one year. If there are any quality problems within 7 days after shipping out from our factory, we can exchange a brand new same model machine for you

▲ We will offer free of charge maintenance service for machines which with hardware malfunction (except for the instrument damage caused by human factors) in warranty period. Please don't repair machine without factory permission

★ Below situations NOT included in warranty service:

1. Damage caused by improper transportation, usage, management, and maintenance, or damage caused by human factors;
2. Disassemble, modify or repair products without permission;
3. Damage caused by external reasons (lightning strike, power supply etc.)
4. Damage caused by improper installation or use;

For product damage not included in warranty range, we can provide paid service.

★ Invoice and warranty card are necessary when applying for maintenance service from SHOWVEN.

## Warranty Card

Product Name:		Serial No.	
Purchase Date:			
Tel:			
Address:			
Info. feedback about the problem:			
Actual problem:			
Maintenance detail:			
Service Engineer:		Service Date:	





# SHOWVEN<sup>®</sup>



**Showven Technologies Co., Ltd.**

Tel: +86-731-83833068

Web: [www.showven.cn](http://www.showven.cn) E-mail: [info@showven.cn](mailto:info@showven.cn)

Add: Liuyang Economic Development Zone, Changsha, 410300, Hunan Province,  
P.R.China